
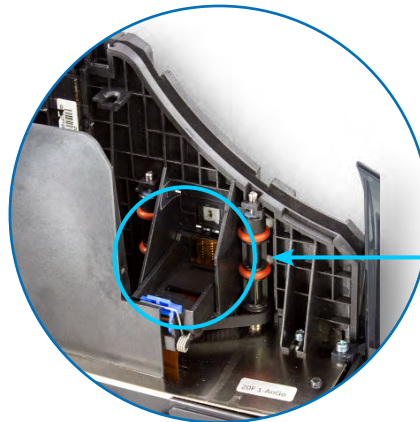


INSTALLING THE INK CARTRIDGE

Note: This step only applies to CheXpress CX35s that have the optional inkjet configuration. Follow these instructions when installing the ink cartridge for the first time, or when replacing an empty cartridge.

- 1 Step 1:** Pull out on the locking tabs at the base of the scanner and remove the cover by lifting it vertically.

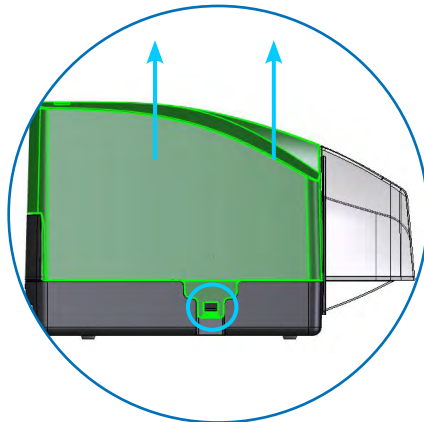

- 2 Step 2:** Open the ink cartridge pouch and remove the protective tape covering the ink nozzles. Be careful not to touch the ink nozzle with your fingers or allow it to come in contact with anything else.

- 3 Step 3:** Insert the nozzle end of the cartridge into the platform while keeping the end of the cartridge tilted slightly upward. Then, push down on the rear of the cartridge until it clicks or snaps securely into position.

Important: The top of the cartridge should appear level or flat when it is fully seated.



Insert the ink cartridge at a slight angle



Push down on the cartridge to fully seat



Correctly inserted

- 4 Step 4:** Place the cover back onto the scanner.

Note: If the scanner must be transported by common carrier from one place to another, or will experience extended periods of inactivity, it is advisable to remove the ink cartridge from the scanner and seal it in an airtight bag. If the cartridge has not been used for an extended period of time, it might be necessary to clean the inkjet nozzles by gently blotting them with a towel dampened with water.